

Product Specification

Object	Plug/Adaptor							
Type	Pen Type							
Product	NEOCLEAN-E			NEOCLEAN-EZ				
	E1	E2	E3	EZ1	EZ2	EZ3	EZ1 Plus	EZv
Model#	ATC-NE-E1	ATC-NE-E2	ATC-NE-E3	ATC-NE-EZ1	ATC-NE-EZ2	ATC-NE-EZ3	ATC-NE-EZ1P	ATC-NE-EZv
Compatible Connectors	MU, LC	SC, SC2, FC, FAS, FA	SC, FC, ST, E2000, PC/APC	MU, LC	SC, SC2, FC, FAS, FA	SC, FC, ST, E2000, SMPTE304M*	ODC, LC, MU, Ø1.25mm Ferrule Connector	Ø2.0mm Ferrule Connector for HDTV*
Size (mm)	L:240	L:230	L:230	L:104 (with attachment:113 / extended:167)	L:109 (with cap:121)	L:107 (with cap:113)	L:109 (with cap:121)	
Usages	over 750 times							
Consumables	Type	Replaceable Cartridge						
	Product	Cartridge (3 units/set)						
	Model#	ATC-NE-ES1	ATC-NE-ES2	ATC-NE-ES3	Disposable Type			

* Compatible with other types of hybrid connector for HDTV.

Object	Plug/Adaptor	
Type	Pen Type	
Product	NEOCLEAN-M	NEOCLEAN-M2
	ATC-NE-M1	ATC-NE-M2
Compatible Connectors	MPO, MTP® (Pins yes/no)	MPO-16, MTP®-16 (Pins yes/no)
Size (mm)	L:197 × W:15 × H:51	
Usages	over 600 times	
Consumables	Disposable Type	

Object	Plug						
Type	Click Type Cassette						
Product	OPTIPOP				CLETOP-S		
	R1	R2	R3	R4	A Type	B Type	
Model#	ATC-RE-01	ATC-RE-02	ATC-RE-03	ATC-RE-04	14110501	14110601	
Compatible Connectors	Single core, Multi-core (no pin)	Single core	MT, MPO (with pin)	MT-RJ (with pin)	Single core (ideal for ø2.5mm)	Single core, Multi-core (no pin)	
Size (mm)	W:124 x D:35 x H:83				W:125 x D:35 x H:85		
Usages	over 400 times				over 400 times		
Consumables	Type	Replaceable Cartridge (6 reels/set)				Replaceable Cartridge (6 reels/set)	
	Product	OPTIPOP RS				Blue tape / White tape	
	Model#	ATC-RS-01				14110700 / 14110710	

Object	Plug				
Type	Lever Type Cassette				Simple Type
Product	CLETOP				NEOCLEAN-R2
	A Type	B Type	MT-RJ Type	MPO Type	ATC-NE-R2
Model#	14100501	14100601	14100101	14100201	
Compatible Connectors	Single core (ideal for ø2.5mm)	Single core, Multi-core (no pin)	MT-RJ (with pin)	MT, MPO (with pin)	Single core, Multi-core (no pin)
Size (mm)	W:130 x D:40 x H:75				W:115 x D:25 x H:55
Usages	over 400 times				over 400 times
Consumables	Type	Replaceable Cartridge (6 reels/set)			
	Product	Blue tape / White tape			
	Model#	14100700 / 14100710			

Object	Adaptors					
Type	Stick Type					
Product	NEOCLEAN-S		CLETOP Stick			
	S125	S250	1.25mm Type	2.5mm Type	2.0mm Type	2.0/2.5mm Double ended
Model#	ATC-ST-01N	ATC-ST-02N	14100401	14100400	14100402	14100403
Compatible Connectors	ø1.25mm	ø2.5mm	ø1.25mm	ø2.5mm	Connectors for high vision cameras	
Length (mm)	Max. 152 - Min. 45		101	147	147	151
Packing Specifications	250 sticks/set		200 sticks/set		200 sticks/set	100 sticks/set

Notes:
 * CLETOP, OPTIPOP and NEOCLEAN are trademarks of NTT Advanced Technology Corporation.
 * "MTP" is a registered trademark of US Conec Ltd. Other company names, product names, etc. recorded herein are trademarks or registered trademarks of each respective company.
 * Please understand that the contents recorded herein may be subject to change without notification.
 * Catalog contents from September, 2018 to present.

201910A

For more information, please contact

http://www.ntt-at.com/product/optical_cleaner/



NTT-AT OPTICAL CONNECTOR CLEANER LINEUP
 NEOCLEAN™ CLETOP™ OPTIPOP™ SERIES



The pioneer in optical connector cleaners, brings to you the highest quality cleaning tools.





Supporting reliability in telecommunications service: NTT-AT's Optical Connector Lineup

The cause of many troubles in optical communication equipment is contamination on the end face of optical connectors. NTT Advanced Technology's optical connector cleaners use fiber developed specifically for optical connectors, so even the smallest contaminants not visible to the naked eye are removed. Engineered with both highly portable compact designs and ease of operation in mind, and since no cleaning fluids are necessary there are no special needs for the operating environment either. We have prepared a full lineup of cleaners compatible with every type of optical connector. Please put our technology to work for you.

Why is cleaning optical connectors so important?


Optical connector end face is easily contaminated, and when contaminants adhere to the 10µm diameter optical fiber core, there is a high chance of transmission quality being affected. Since there is also the danger of fiber end face being damaged by high power light, cleaning is necessary before making a connection.

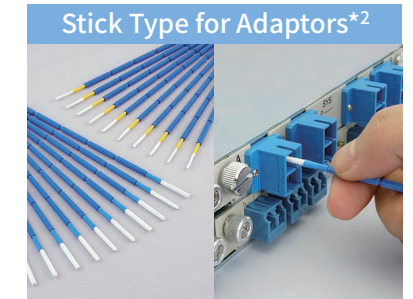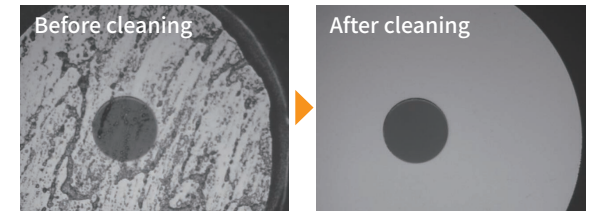

*1: For ferrule end face cleaning in plugs. *2: For ferrule end face cleaning in adaptors



		Main Connector/Cleaner Compatibility Chart			
		Compatible Connector	Ferrule End Face Cleaner		
Single core optical connectors	MU plug	LC plug	NEOCLEAN-R2 NEOCLEAN-E1 NEOCLEAN-EZ1 NEOCLEAN-EZ1 Plus	OPTIPOP R1/R2	CLETOP-S B type CLETOP B type
	SC plug	FC plug	ST plug E2000 plug	NEOCLEAN-R2 NEOCLEAN-E2, E3 NEOCLEAN-EZ2, EZ3	OPTIPOP R1/R2 CLETOP-S A/B type A type B type
	MU adaptor	LC adaptor		NEOCLEAN-E1 NEOCLEAN-EZ1 NEOCLEAN-EZ1 Plus	NEOCLEAN-S125 CLETOP stick 1.25mm type
	SC adaptor	FA plug FA socket FAS plug FAS socket	ST adaptor E2000 adaptor	NEOCLEAN-E2, E3 NEOCLEAN-EZ2, EZ3	NEOCLEAN-S250 CLETOP stick 2.5mm type
Multi-core connectors	MT plug no pin	MPO plug no pin	MTRJ plug no pin	OPTIPOP R1	CLETOP-S B type CLETOP B type NEOCLEAN-R2
	MT plug with pin	MPO plug with pin		OPTIPOP R3	CLETOP MPO type
	MPO adaptor pins yes/no	MPO plug pins yes/no		NEOCLEAN-M NEOCLEAN-M2	

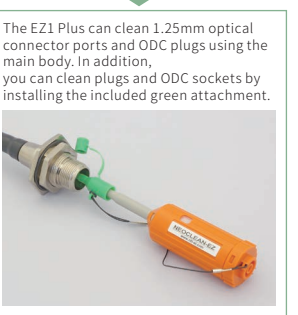

*3: For cleaning FA plugs / FAS plugs, please use NEOCLEAN-E or NEOCLEAN-EZ. *4: For cleaning E2000 plug, please use NEOCLEAN-E3 or NEOCLEAN-EZ3. *5: For cleaning ST / E2000 adaptor, please use NEOCLEAN-E3 or NEOCLEAN-EZ3. [We have cleaners for connectors not shown in the above chart, so please feel free to consult with us about any needs you may have.]